

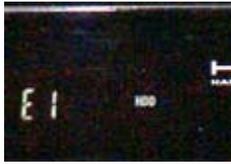


# ELKNet

Enhanced Learning and Knowledge Network

## Quick Start Guide

### Setting Up Equipment to Participate in an Interactive Television (ITV) Workshop

1. Ensure ELKNet display cart power cord is plugged in to a power outlet.	
2. Ensure ELKNet display cart connectivity cable is properly connected to ELKNet wall plate.	
3. Ensure Scientific Atlanta satellite receiver (on bottom shelf of display cart) is powered on and indicates it is receiving the signal.	
4. Ensure the DVD player/recorder (on middle shelf) power switch is on. You should see either "E1" or "L1" displayed in the front panel display. If necessary, turn it on using the switch on the front left of the unit.	
5. Using the LCD remote control, turn the LCD monitor on. When the monitor is turning on, you can expect the following sequence: <ul style="list-style-type: none"> <li>• Blue power light comes on (front bottom right of monitor).</li> <li>• Blue screen displays on monitor with letters "HDMI1" display at top left.</li> <li>• "Welcome to ELKNet" message with help desk phone number displays.</li> <li>• Signal from satellite receiver displays (may take 5-10 seconds).</li> <li>• "Welcome to ELKNet" message disappears (takes about 40 seconds).</li> </ul>	
<b>NOTE: If testing signal reception, not participating in a training event, skip step 6. Go to step 7.</b>	
6. Set the push to talk system (on top shelf) settings to dial the audio bridge: <ul style="list-style-type: none"> <li>• Volume Control slide lever two thirds to the right (volume ON).</li> <li>• Auto Answer and Satellite Audio buttons de-activated (red light OFF).</li> <li>• Internal Speaker and Manual Answer/Call buttons activated (red light ON).</li> <li>• Using the number keypad, dial the audio bridge and enter the passcode.</li> </ul>	
7. Set the push to talk system settings to receive audio from satellite: <ul style="list-style-type: none"> <li>• Volume Control slide lever completely to the left (volume OFF).</li> <li>• Manual Answer/Call button - DO NOT TOUCH leave activated (red light ON).</li> <li>• Internal Speaker button deactivated (red light OFF).</li> <li>• Satellite Audio button activated (red light ON).</li> </ul>	
8. You should see and hear either the training channel or the home channel (CNN). <ul style="list-style-type: none"> <li>• If there is no sound, press the "+" volume button on the LCD remote control.</li> <li>• Using the LCD remote control, adjust the volume of LCD monitor to normal level for listening.</li> </ul>	
9. Uncoil the microphone cable for the push to talk system (located on the bottom shelf, front left – in front of the Scientific Atlanta satellite receiver). Plug into either microphone jack on the back of the microphone and set the microphone on a student table. If you have additional microphones, set them up by linking the microphones to each other using the provided cables.	
10. Press and hold down the "PUSH TO TALK" lever on the microphone. Pressing the lever should automatically mute the audio coming from the monitor. Releasing the lever should restore the audio.	

ELKNet Help Desk (866)243-4462